



# MALINA

EXPLORE BEAUTY



## POCKET TRAVEL KIT

Mini Straightner 110 - 240V  
Mini Curling 110 - 240V  
Mini Blow Dryer 125V / 250V  
Malina® Made in China

---

**IMPORTANT INSTRUCTIONS**

---

# POCKET TRAVEL KIT

**Malina Pocket Travel** kit combined small size and high-performance tools. Malina fashionable travel bag fits easily in your carry on luggage, purse, or suitcase. All tools are dual voltage.

Including:

- \* **Mini blow dryer and diffuser**
- \* **Mini straightner**
- \* **Mini curling iron**
- \* **Stylish travel bag**

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

### **READ ALL INSTRUCTIONS BEFORE USING**

**DANGER** – To reduce the risk of electrocution:

1. Always unplug this appliance immediately after using.
2. Do not use while bathing.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in or drop into water or other liquid.
5. Do not reach for an appliance that has fallen into water. Unplug immediately.

**WARNING** – To reduce the risk of burns, electrocution, fire, or injury to persons:

1. An appliance should never be left unattended when plugged in.
2. Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities.
3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped, damaged, or dropped into water. Return the appliance to a service center for examination and repair.
5. Keep the cord away from heated surfaces. Do not wrap the cord around the appliance.
6. Never use while sleeping.
7. Never drop or insert any object into any opening or hose.

## IMPORTANT SAFETY INSTRUCTIONS

8. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
9. Connect this appliance to a properly grounded outlet only. See Grounding Instructions.
10. Do not use an extension cord with this appliance.
11. NEVER use the device in water or other liquids. NEVER use the device near a bathtub, shower, containers full of water, or any other damp place. Never use it with bare feet or when hands and feet are wet.
12. Do not place the hot hair straightener on plastic or any material sensitive to heat.
13. Do not touch the hair straightener when it is hot. Always be very careful not to burn yourself when styling.
14. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
15. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similar qualified person in order to avoid a hazard.
16. Children should be supervised to ensure that they do not play with the appliance.
17. Do not use the appliance for any other purpose than its intended use.

## IMPORTANT SAFETY INSTRUCTION

18. To avoid risk of electric shock, this appliance is only used on dry hair, not for any wet or damp hair.

**WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.




### User-Maintenance Instructions

1. Before carrying out any cleaning or maintenance, please make sure the appliance is unplugged and has cooled down.
2. If the appliance isn't working properly, please firstly check the plug and then check that the main electric supply is switched on. Do not tamper with it. For any repairs, please contact the technical service centre authorized by the manufacturer or its agent.
3. Never wrap the power cord around the hair straightener when it is unplugged.
4. If the cord of a hand-supported appliance is twisted, to untwist the cord before use.
5. The appliance has no user serviceable parts.

### Cleaning

1. Before cleaning, please make sure the appliance is unplugged and has cooled down.
2. Don't immerse the appliance into liquid for cleaning.
3. After cooling down, use cloth to clean the working surface or other part.

## Mini Blow Dryer

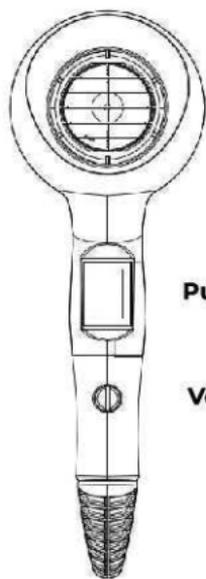

**Push button switch**

**Voltage selector**

Product Name : Malina Mini  
Hair Dryer  
Model: MA095  
Rated Voltage:  
125V/250V 60/50Hz  
Rated Power: 1200 W

### Voltage selector

Prior to first use, check that the appliance is adjusted to the local mains Voltage . **Do not forget to check the voltage selector** when taking the appliance with you on a journey and when coming back: it may be necessary to change the setting (using e.g. a coin).

Setting 250: suitable for mains voltages in the range 220-240 VAC (European countries.)

Setting 125: suitable for mains voltages in the range 110-120 VAC (Mainly USA and Far-East countries.)

**Push button switch** (Switch C positions)

0: Off

|: Gentle and warm air flow for easy styling.

||: High temperature and strong air flow for quick drying.


### Important

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- When the hairdryer is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the hairdryer is switched off;
- For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

**WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

- Keep away from water! Do not use this product near or over water contained in baths, washbasins, sinks, etc. If, for some reason, the product has fallen into water: first unplug immediately. Then, dispose of the product. It must not be used again.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Even when the hair dryer is switched off, the power is still on. Always pull out the mains plug when not in use.
- Never obstruct the air grills.
- This product is equipped with an automatic overheating protection device. If the appliance overheats, it will switch off. Unplug the appliance. After cooling down for a few minutes, the appliance can be used again. Before reusing, check the inlet and outlet grilles for possible blockage by fluff, hair, etc.

## Malina Mini Curling Iron

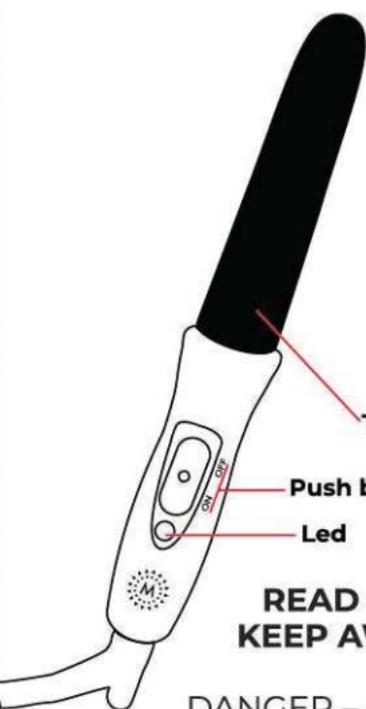

### Product Name: Maina Mini Curling Iron

Model: MA097

Rated Voltage: 110V~240V

60/50Hz

Rated Power: 30W(USA)/25W(Canada)

Tourmaline Plates

Push button switch

Led

### READ ALL INSTRUCTIONS BEFORE USING KEEP AWAY FROM WATER

**DANGER** – As with most electrical appliances, electrical parts are electrically live even when the switch is off:

To reduce the risk of death by electric shock:

1. Always unplug this appliance immediately after using.
2. Do not use while bathing.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in or drop into water or other liquid.
5. If an appliance falls into water, “unplug it” immediately. Do not reach into the water.
6. Use the glove to avoid risk of burns.

**WARNING** – To reduce the risk of burns, electrocution, fire, or injury to persons:

1. An appliance should never be left unattended when plugged in.
2. Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities.
3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped, damaged, or dropped into water. Return the appliance to a service center for examination and repair.
5. Keep the cord away from heated surfaces. Do not wrap the cord around the appliance.
6. Never use while sleeping.

7. Never drop or insert appliance into any opening or hose.
8. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
9. Do not use an extension cord with this appliance.
10. NEVER use the device in water or other liquids. NEVER use the device near a bathtub, shower, containers of water, or any other damp place. Never use it with bare feet or when hands and feet are wet.
11. Do not place the hot hair Curler on plastic or any material sensitive to heat.
12. Do not touch the hair Curler when it is hot. Always be very careful not to burn yourself when styling.
13. Do not use the appliance for any other purpose than its intended use.
14. To avoid risk of electric shock, this appliance is only used on dry hair, not for any wet or damp hair.
15. This curling iron and clip are hot when in use. Do not let eyes and bare skin touch heated surfaces.
16. Do not place the heated curling iron directly on any surface while it is hot or plugged in.
17. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Children should be supervised to ensure that they do not play with the appliance.

**WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

18. When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off;
19. For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

## Malina Mini Curling Iron

20. Burn hazard. Keep appliance out of reach from young children, particularly during use and cool down;
21. When the appliance is connected to the power supply, never leave it unattended;
22. Always place the appliance with the stand, if any, on a heat-resistant, stable flat surface.

SAVE THESE INSTRUCTIONS HOUSEHOLD USE ONLY  
Operating Instructions  
Ensure hair is dry or nearly dry and combed through.

Separate a 1 cm (1/2") section of hair. Twist the appliance under and upwards so the hair winds around the barrel.

Once you have finished styling, please unplug the appliance, and leave it to cool down completely before storing it away.

### User-Cleaning & Maintenance Instructions

1. Before carrying out any cleaning or maintenance, please make sure the appliance is unplugged and has cooled down.
2. If the appliance isn't working properly, please firstly check the plug and then check that the main electric supply is switched on. Do not tamper with it. For any repairs, please contact the technical service centre authorized by the manufacturer or its agent.
3. Never wrap the power cord around the appliance when it is unplugged.
4. If the cord of a hand-supported appliance is twisted, to untwist the cord before use.

5. The appliance has no user serviceable parts.
6. The appliance may require cleaning due to a build up of residue from hair products, and use light detergent with wet towel to clean it.

### Environment friendly disposal

You can help protect the environment!

Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal centre. The packaging material is recyclable. Dispose of the packaging in an environmentally friendly manner and make it available for the recyclable material collection-service.

**WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.



## Malina Mini Hair Straightener



**Product Name:** Malina  
Mini Hair Straightener  
**Model:** MA096  
**Rated Voltage:** 110V~240V  
60/50Hz  
**Rated Power:** 40W(USA)  
/25W(Canada)

**Tourmaline Plates**

**Push button switch**

**Led**

### IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

#### READ ALL INSTRUCTIONS BEFORE USING

**DANGER** – To reduce the risk of electrocution:

1. Always unplug this appliance immediately after using.
2. Do not use while bathing.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in or drop into water or other liquid.
5. Do not reach for an appliance that has fallen into water. Unplug immediately.

**WARNING** – To reduce the risk of burns, electrocution, fire, or injury to persons:

1. An appliance should never be left unattended when plugged in.
2. Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities.
3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped, damaged, or dropped into water. Return the appliance to a service center for examination and repair.

5. Keep the cord away from heated surfaces. Do not wrap the cord around the appliance.
  6. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
  7. Never use while sleeping.
  8. Never drop or insert any object into any opening or hose.
  9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
  10. Connect this appliance to a properly grounded outlet only. See Grounding Instructions.
  11. Do not use an extension cord with this appliance.
  12. NEVER use the device in water or other liquids. NEVER use the device near a bathtub, shower, containers full of water, or any other damp place. Never use it with bare feet or when hands and feet are wet.
  13. Do not place the hot hair straightener on plastic or any material sensitive to heat.
  14. Do not touch the hair straightener when it is hot. Always be very careful not to burn yourself when styling.
  15. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
  16. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similar qualified person in order to avoid a hazard.
  17. Children should be supervised to ensure that they do not play with the appliance.
  18. Do not use the appliance for any other purpose than its intended use.
  19. To avoid risk of electric shock, this appliance is only used on dry hair, not for any wet or damp hair.
- WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

### SAVE THESE INSTRUCTIONS

#### Operating Instructions

1. Flat straight - Insert a 2 inch section of hair between the plates, then squeeze the handle together and glide slowly through hair from the roots to the end.
2. Flip out - Insert a 2 inch section of hair between the plates, then squeeze the handle together and glide

## Malina Mini Hair Straightener

slowly together hair beginning at the roots, slight flip out the ends.

3. Flip in - Insert a 2 inch section of hair between the plates, then squeeze the handle together and glide slowly together hair beginning at the roots, slight flip in the ends.
4. The LED light will remain on all the while the product is switched on and in use.
5. Wait until the plates reach the setting temperature to carry out styling and use it in a correct way by holding it by the handle when styling.
6. To use, please put DRY hair between the two plates, press the handle closing the straightener, and then slide it down towards the end of the hair.
7. Once you have finished styling, please unplug the hair straighteners, and leave it to cool down completely before storing it away.
8. This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

### User-Maintenance Instructions

1. Before carrying out any cleaning or maintenance, please make sure the appliance is unplugged and has cooled down.
2. If the appliance isn't working properly, please firstly check the plug and then check that the main electric supply is switched on. Do not tamper with it. For any repairs, please contact the technical service center authorized by the manufacturer or its agent.
3. Never wrap the power cord around the hair straightener when it is unplugged.
4. If the cord of a hand-supported appliance is twisted, to untwist the cord before use.
5. The appliance has no user serviceable parts.

### Cleaning

1. Before cleaning, please make sure the appliance is unplugged and has cooled down.

## Malina Mini Hair Straightener

2. Don't immerse the appliance into liquid for cleaning.
3. After cooling down, use cloth to clean the working surface or other part.

## WARRANTY CERTIFICATED

One-year limited manufacturer warranty for repair or replacement after date of purchase.

The warranty does not cover damage due to abuse or misuse (such as dropping the tool) or tampering (such as attempted repair).

Warranty can be activated only for MALINA hair tools purchased from an authorized retailer. Must have a valid proof of purchase.

Item serial number must be provided to activate warranty.

For customer service please email to:  
[info@malinausa.com](mailto:info@malinausa.com)

Toll free number:  
855-907-2524

## WARRANTY CERTIFICATED

Date:

Serial Number:

Receipt Number:

MALINA®

 [www.malinausa.com](http://www.malinausa.com)

 [info@malinausa.com](mailto:info@malinausa.com)

 Malina USA

 @malinausa

 Malina USA



**Made in China**